


Anytone Key Functions Layout

878/890 DMR Hand Held Radios

Key Functions which are set in any sample code plugs provided by AnytoneUSA/12 Volt Power. Key functions can be set in CPS: Optional Settings -> Key Function or via keypad: Menu -> Settings -> Radio Set -> Key Func.

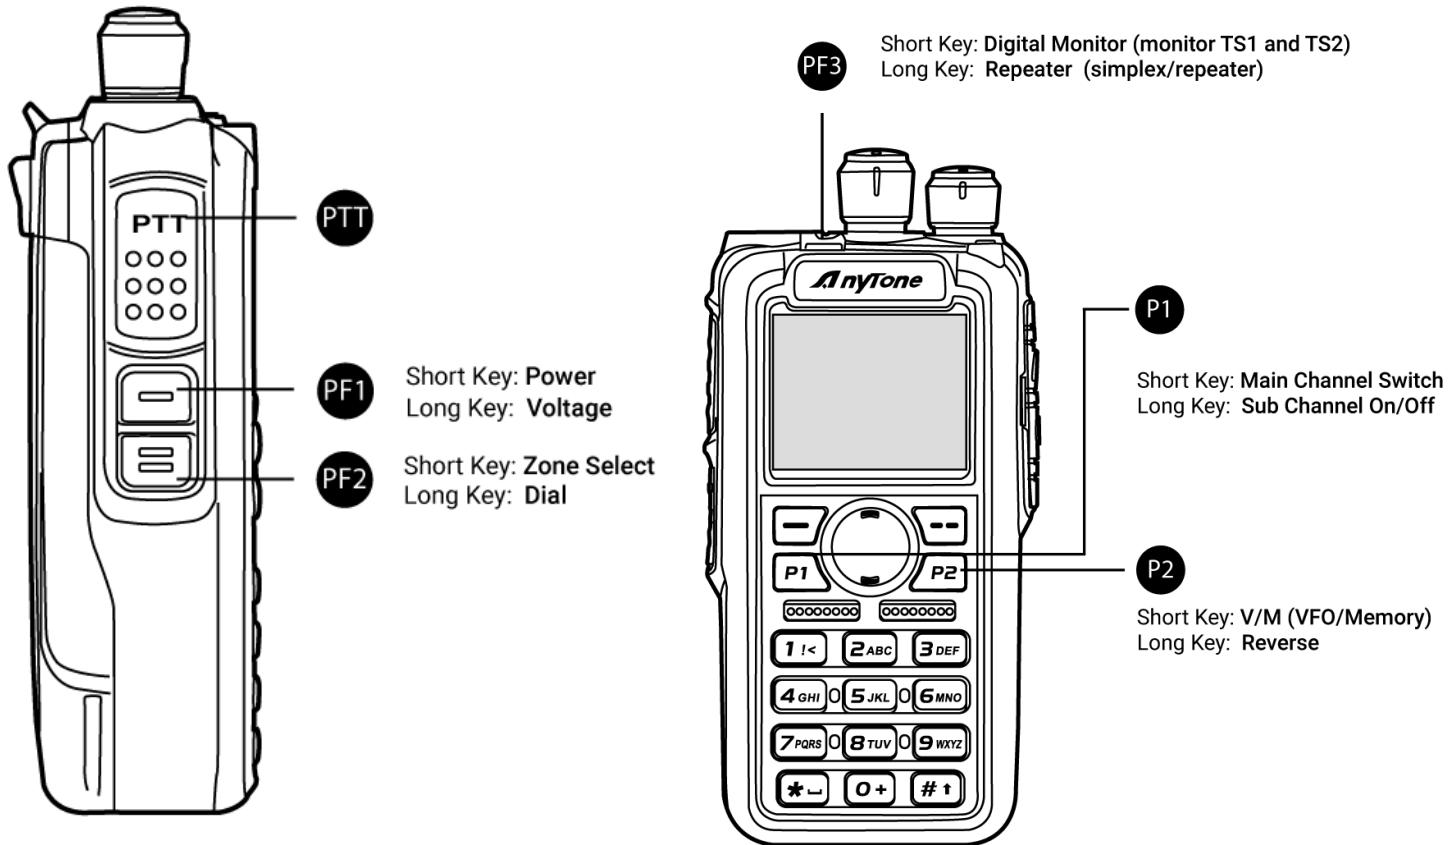

Power = Toggle between Low, Medium, High, Turbo

Voltage = Displays the Battery Voltage

Zone Select = Select a zone by the numerical id

Dial = Manual Dial of Private or Group Talk ID (# key toggles)

Digital Monitor Mode = Radio is able to hear all Digital Traffic

Main Channel Switch = Switches the channel in Dual Mode

Sub Channel On/Off = Toggles the Sub Channel on/off

V/M = Sets the Radio into VFO or Memory Mode

Reverse = In Analog log mode puts the radio to the input frequency

Repeater = Toggles between repeater offset and Simplex Mode